HOME
DECORATORS
COLLECTION

BF-25070 WALL MOUNTED LAUNDRY STORAGE 30H×24W×12D

INV#16357

ASSEMBLY INSTRUCTIONS

Made In China

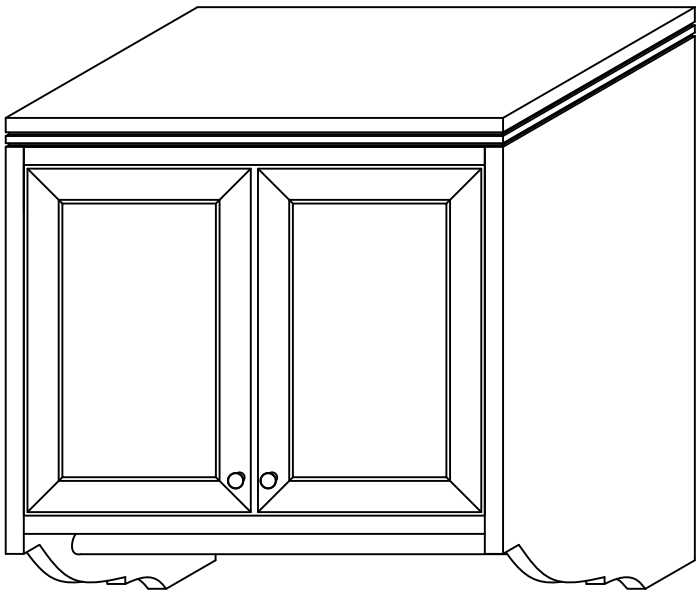

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A TOP PANEL-1PC	B 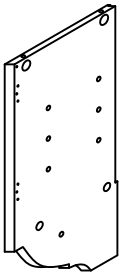 LEFT SIDE PANEL-1PC	C 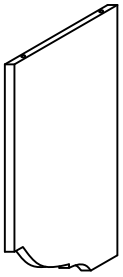 RIGHT SIDE PANEL-1PC
D  ADORNING PANEL-1PC	E 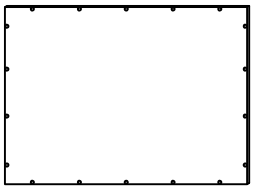 BACK PANEL-1PC	F  CIRCINAL WOOD -1PC
G  ACROSS PANEL-1PC	H  LEFT PANEL-1PC	I RIGHT PANEL-1PC
J 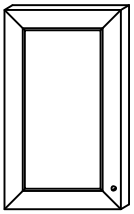 LEFT DOOR-1PC	K 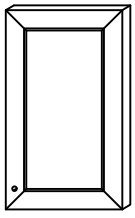 RIGHT DOOR-1PC	L  SHELF-1PC

M 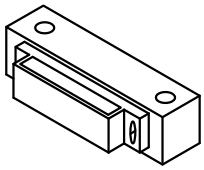 LARGE MAGNET-1PC	N 8mm× 1" SCREWS-5PCS	O CAM-LOCS CAPS-4PCS
P GECKOS-6PCS	Q 8mm× 1-1/2" 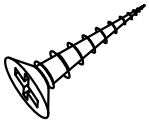 SCREWS-6PCS	R 7mm× 5/8" SCREWS-18PCS
S  SHEETIRONS-2PCS	T 6mm× 5/8" SCREWS-6PCS	U 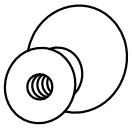 KNOBS-2PCS
V 8mm× 5/8"  SCREWS-2PCS	W  SHELF SUPPORTS-4PCS	X 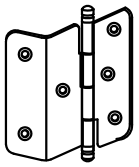 HINGES-4PCS
Y 6mm× 1/2" SCREWS-24PCS	Z 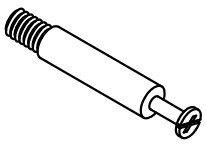 CAM-BOLTS-8PCS	A1  CAM-LOCKS-8PCS

B1  FEMALE MAGNETS-2PCS	C1 5mm× 1/2" SCREWS-2PCS	D1 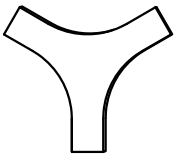 CAM-TOOL-1PC
E1 EVA PADS-2PCS	F1 8mm× 3/4" SCREWS-2PCS	

NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

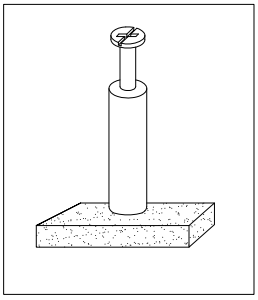

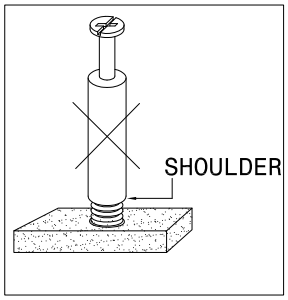

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

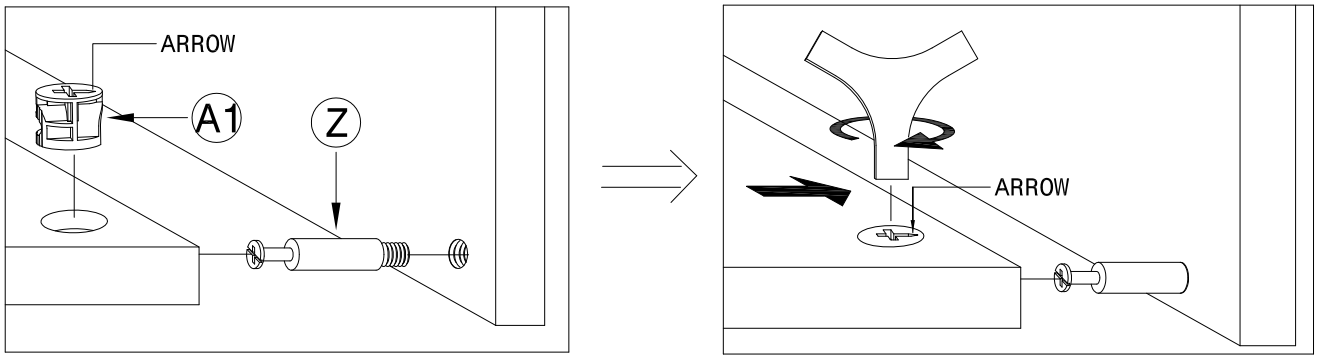

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

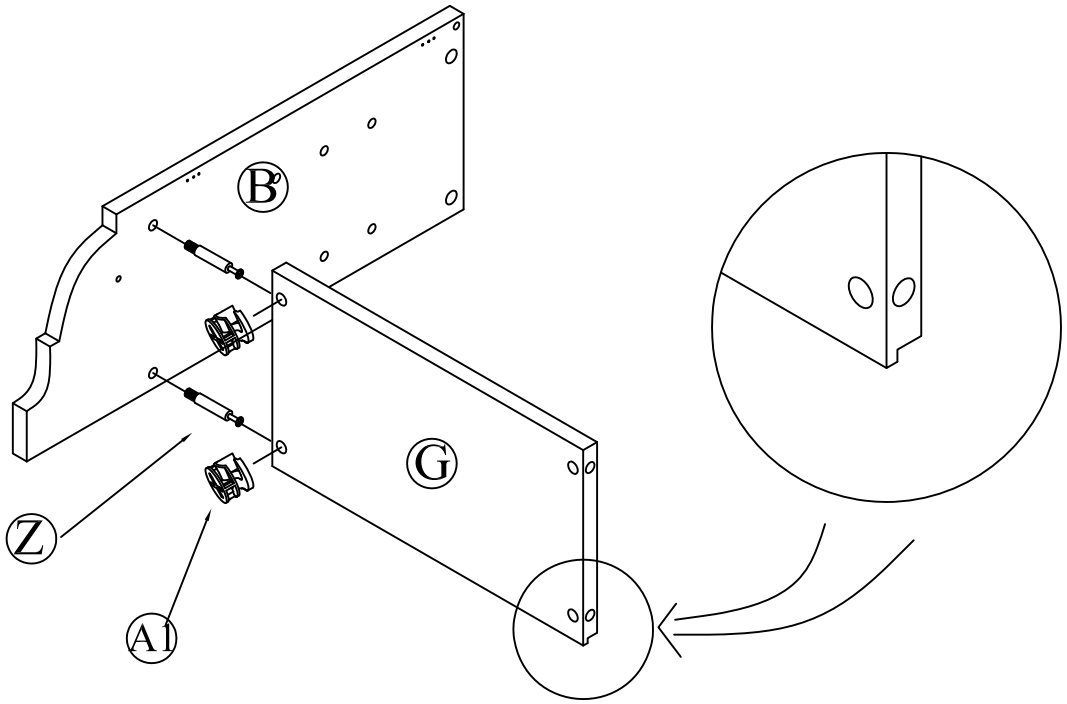

1). ASSEMBLE THE LEFT SIDE PANEL(B).

- ROTATE 2 CAM-BOLTS(Z) INTO THE HOLES IN THE LEFT SIDE PANEL(B).
- PLACE CAM-BOLTS(Z) INTO THE HOLES IN THE PANEL(G) AND ATTACH USING 2 CAM-LOCKS(A1).

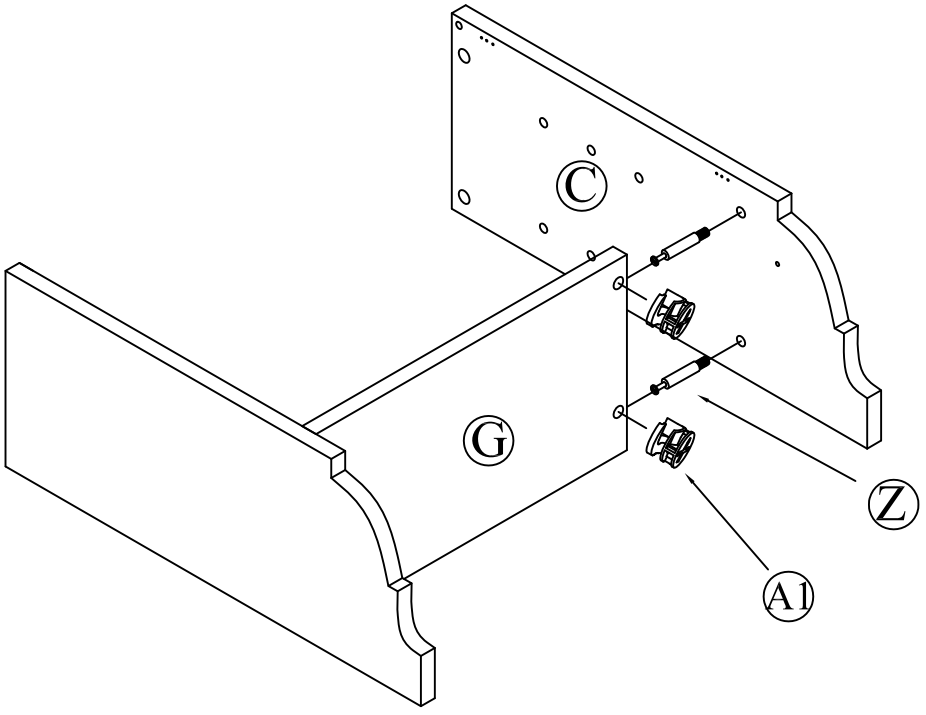

2). ASSEMBLE THE RIGHT SIDE PANEL(C).

- ROTATE 2 CAM-BOLTS(Z) INTO THE HOLES IN THE RIGHT SIDE PANEL(C).
- PLACE CAM-BOLTS(Z) INTO THE HOLES IN THE PANEL(G) AND ATTACH USING 2 CAM-LOCKS(A1).

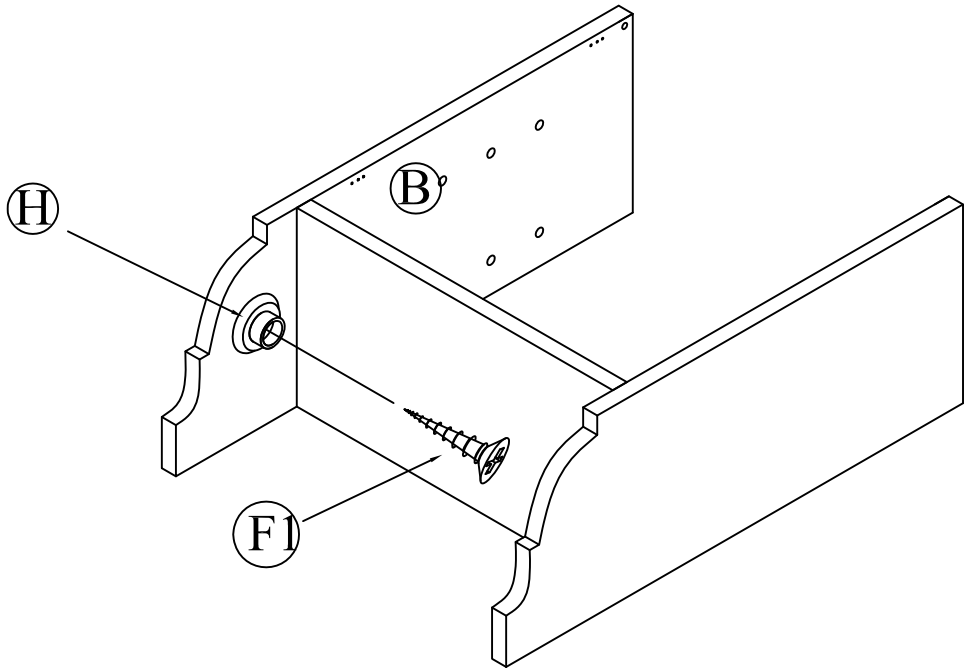

3). ASSEMBLE THE LEFT PANEL(H).

- ATTACH THE LEFT PANEL(H) TO LEFT SIDE PANEL(B) USING 1 SCREW(F1).

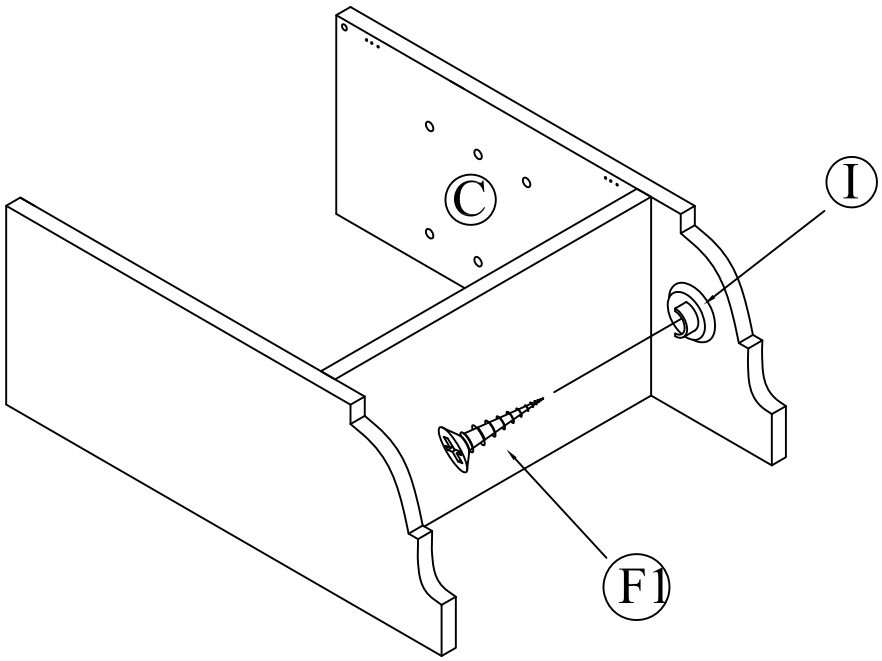

4). ASSEMBLE THE RIGHT PANEL(I).

- ATTACH THE RIGHT PANEL(I) TO RIGHT SIDE PANEL(C) USING 1 SCREW(F1).

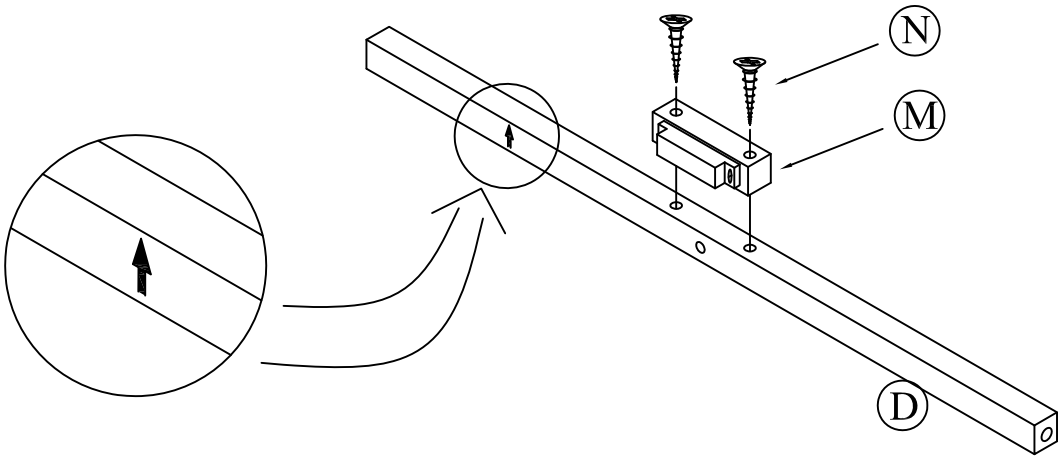

5). ASSEMBLE THE LARGE MAGNET(M).

- ATTACH THE LARGE MAGNET(M) TO ADORNING PANEL(D) USING 2 SCREWS(N).

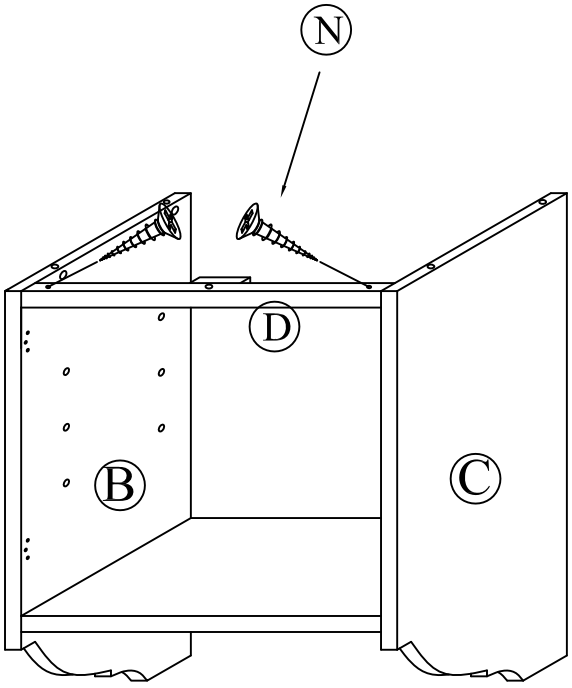

6). ASSEMBLE THE ADORNING PANEL(D).

- ATTACH THE ADORNING PANEL(D) TO PANEL(B/C) USING 2 SCREWS(N).

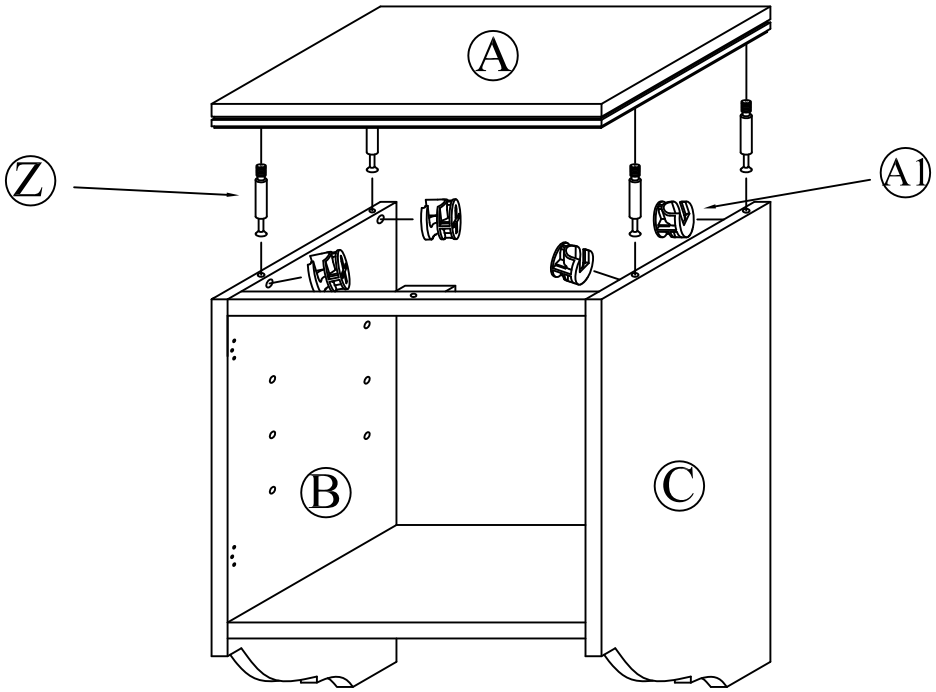

7). ASSEMBLE THE TOP PANEL(A).

- ROTATE 4 CAM-BOLTS(Z) INTO THE HOLES IN THE TOP PANEL(A).
- PLACE CAM-BOLTS(Z) INTO THE HOLES IN THE PANEL(B/C) AND ATTACH USING 4 CAM-LOCKS(A1).

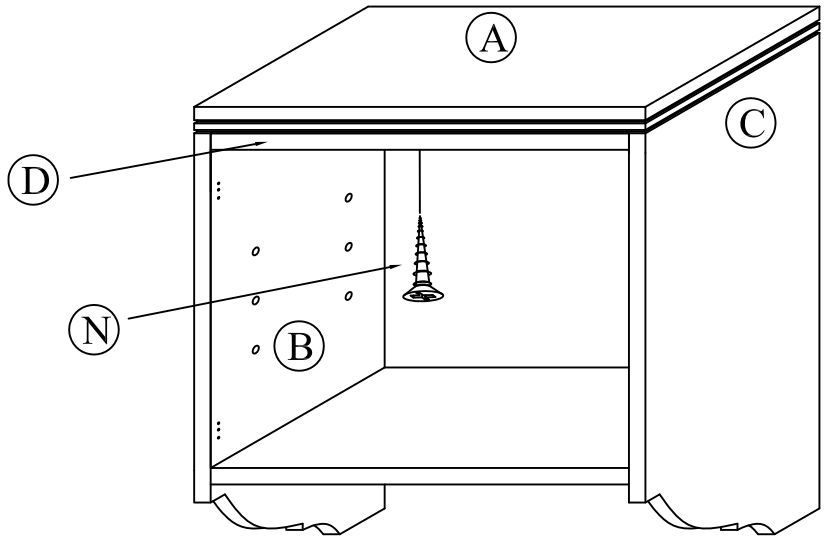

8). ASSEMBLE THE ADORNING PANEL(D).

- ROTATE 1 SCREW(N) INTO THE HOLES IN THE ADORNING PANEL(D).

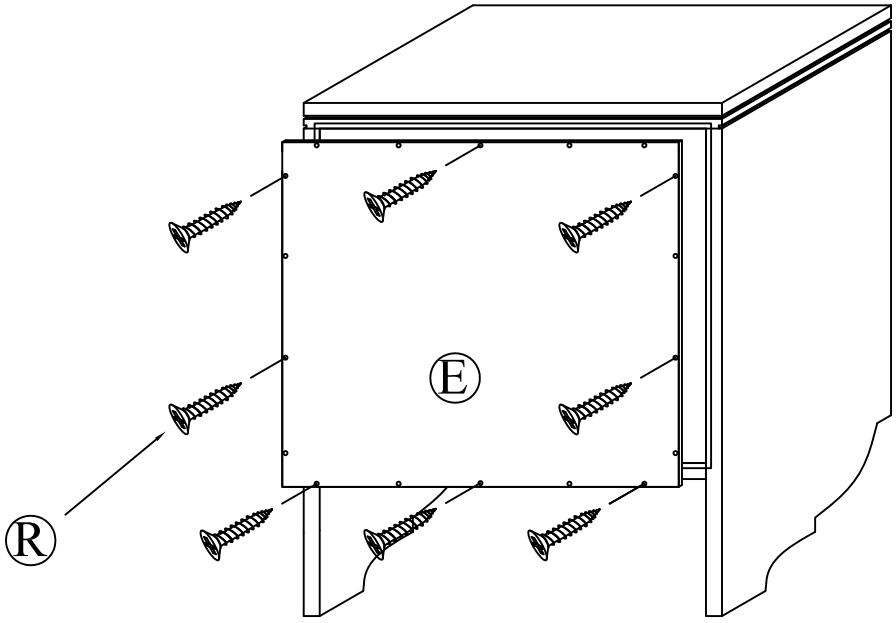

9). ASSEMBLE THE BACK PANEL(E).

- ATTACH THE BACK PANEL(E) USING 18 SCREWS(R).

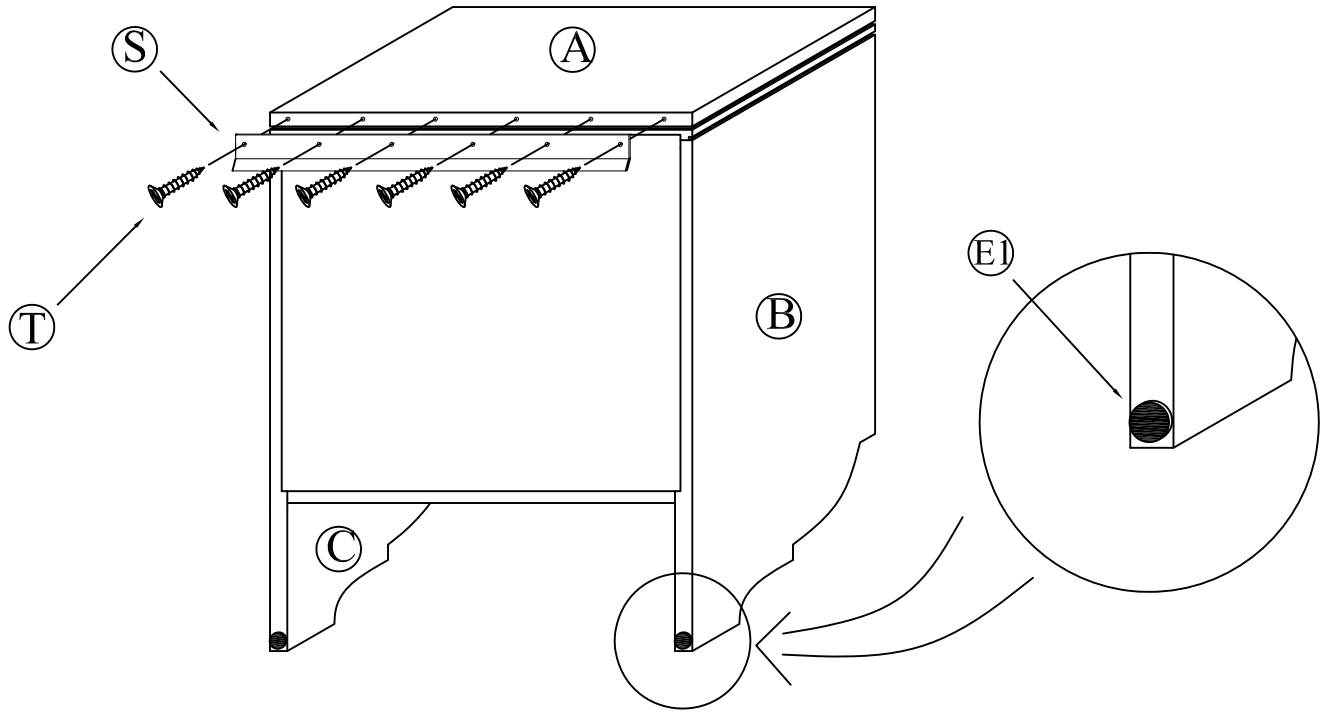

10).ASSEMBLE THE SHEETIRON(S) AND EVA PADS(E1).

- ATTACH THE SHEETIRON(S) TO TOP PANEL(A) USING 6 SCREWS(T).
- ATTACH 2 EVA PADS(E1) TO SIDE PANEL(B/C).

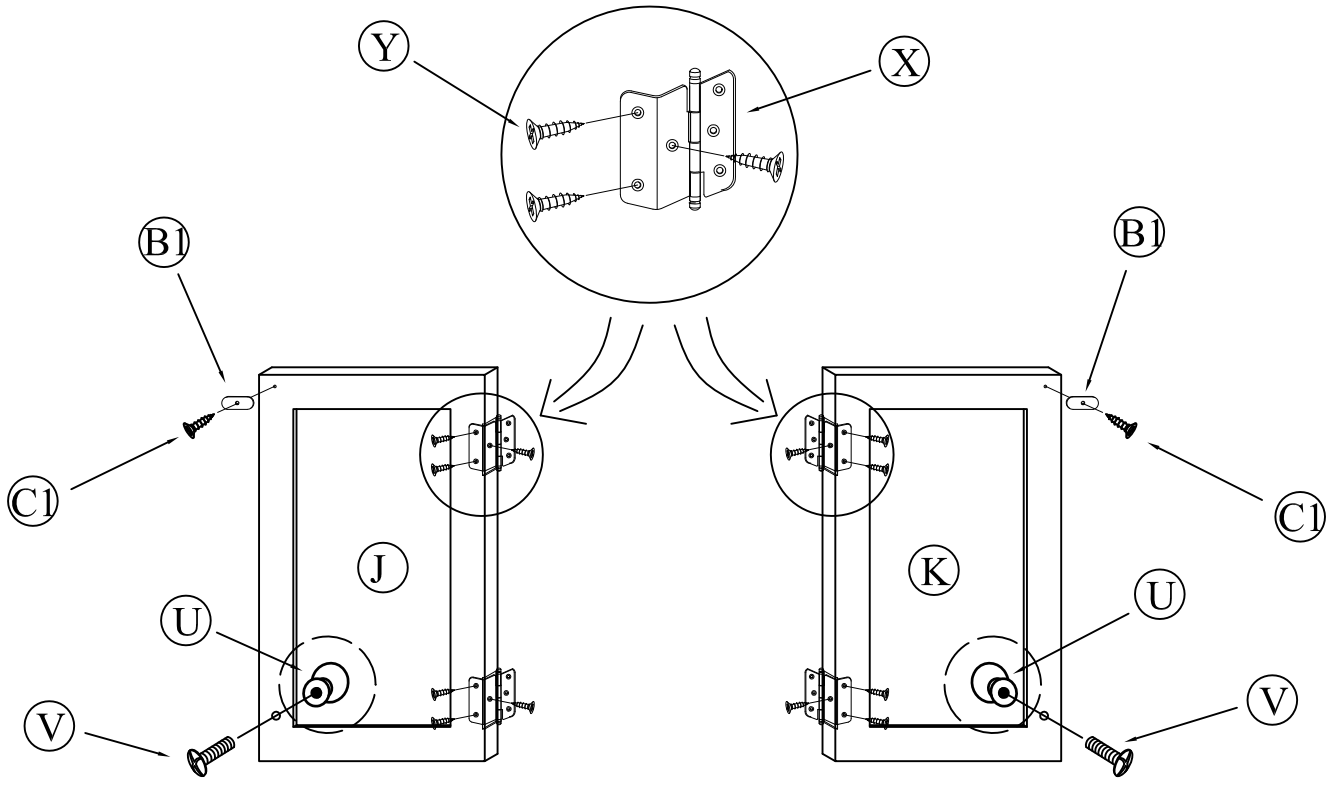

11).ASSEMBLE THE DOOR(J/K).

- ATTACH 2 KNOBS(U) TO DOOR(J/K) USING 2 SCREWS(V).
- ATTACH 2 FEMALE MAGNETS(B1) TO DOOR(J/K) USING 2 SCREWS(C1).
- ATTACH 4 HINGES(X) TO DOOR(J/K) USING 12 SCREWS(Y).

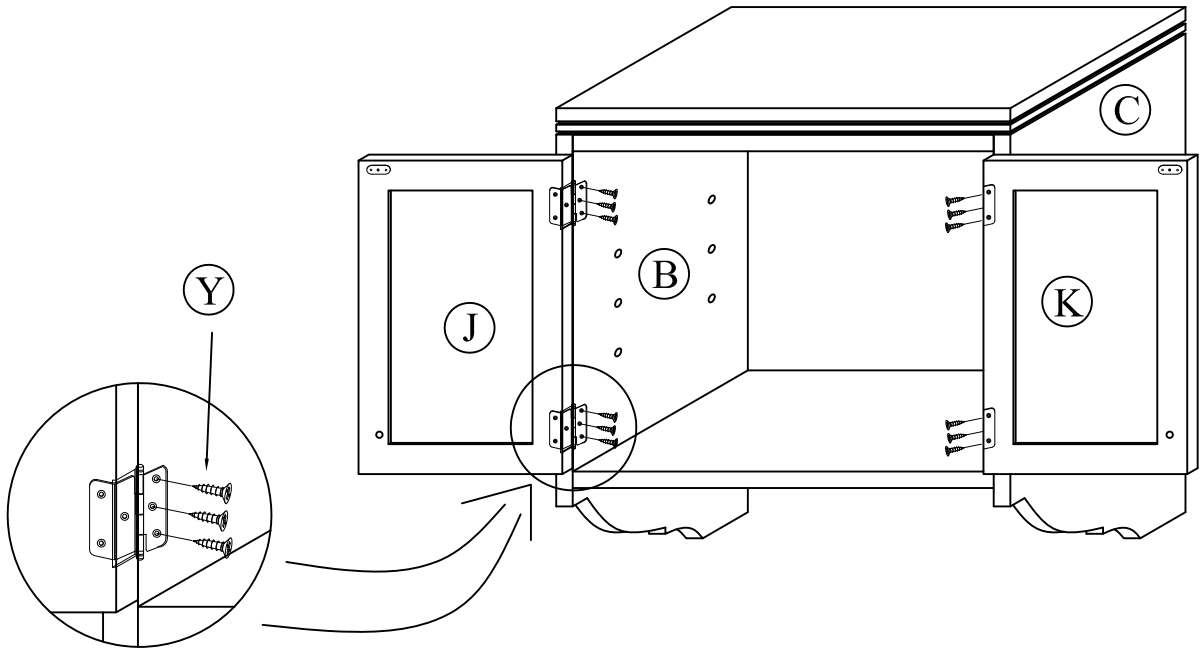

12). ASSEMBLE THE DOOR(J/K).

- ATTACH THE DOOR(J/K) TO SIDE PANEL(B/C) USING 12 SCREWS(Y).

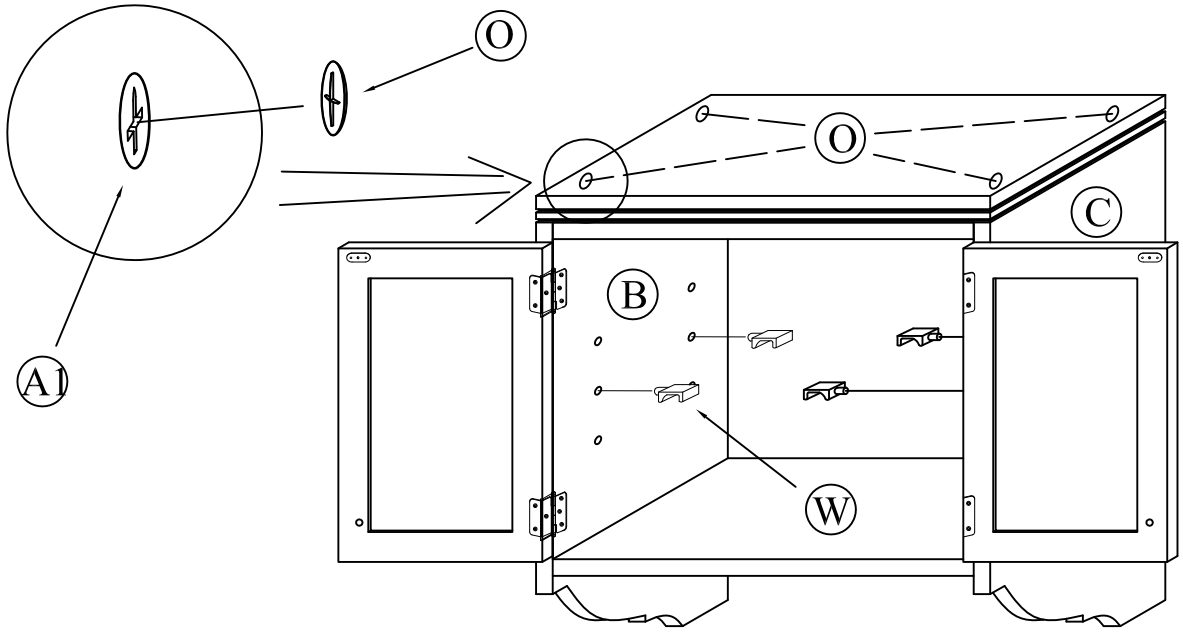

13). ASSEMBLE THE SHELF SUPPORTS(W) AND CAM-LOCK CAPS(O).

- ATTACH THE 8 CAM-LOCK CAPS(O) ONTO THE 8 CAM-LOCKS(A1).
- INSERT 4 SHELF SUPPORTS(W) INTO THE HOLES IN THE PANEL(B/C).

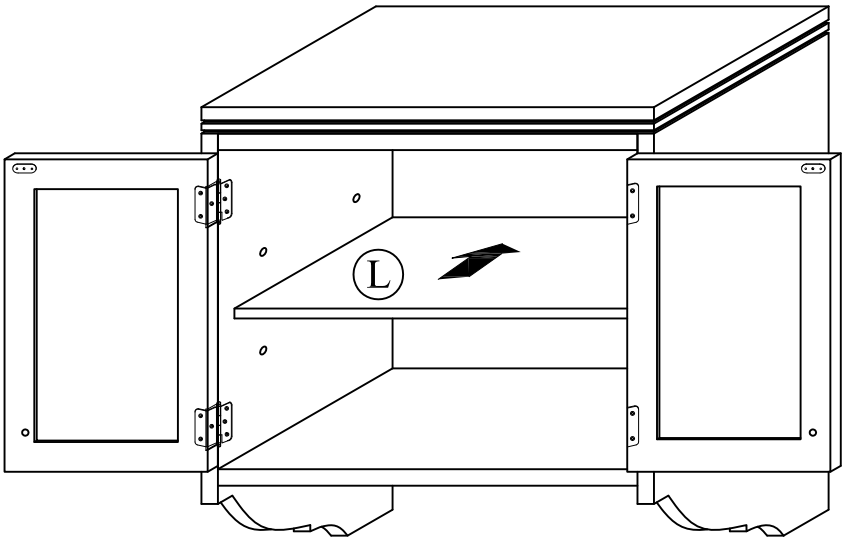

14). ASSEMBLE THE SHELF(L).

- PLACE THE SHELF(L) ONTO THE SHELF SUPPORTS(W).

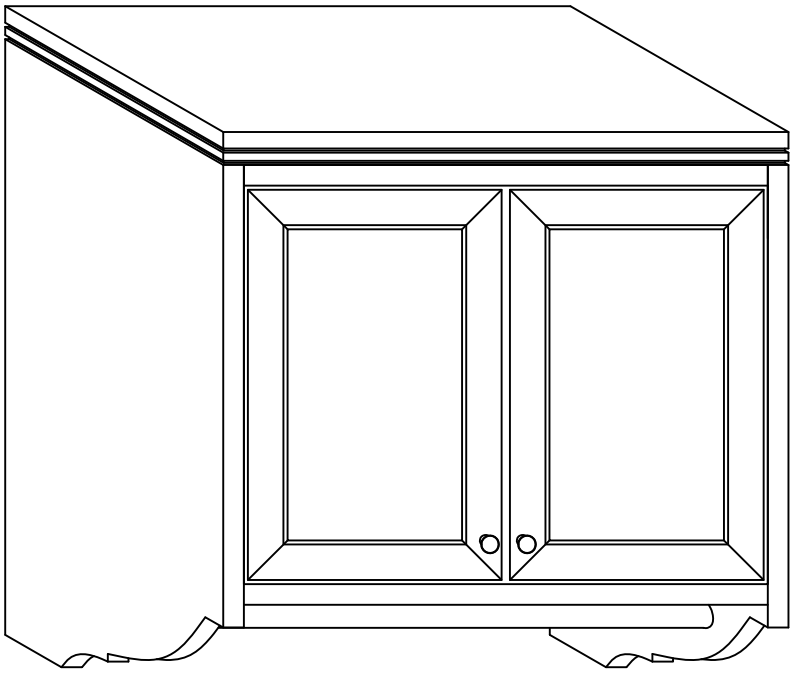

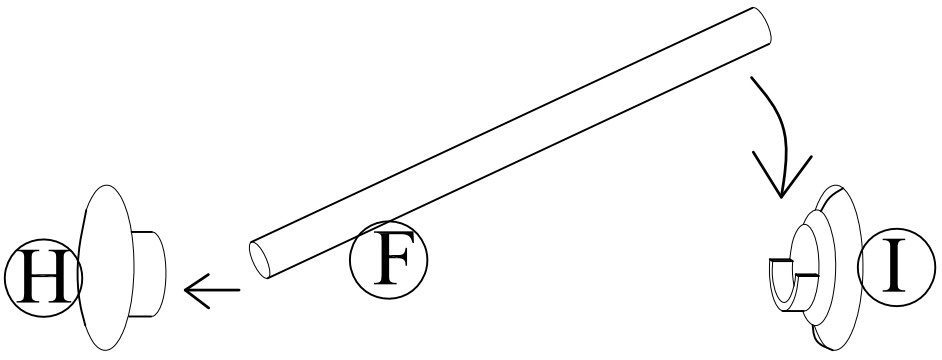

15).ASSEMBLE THE CIRCINAL WOOD(F).

- INSERT THE CIRCINAL WOOD(F) INTO THE HOLES IN PANEL(H/I).
  WHEN INSTALLED, PLS PUT THE CIRCINAL WOODEN(F) IN THE LEFT PANEL(H),
  THEN PUT IT IN THE RIGHT PANEL(I). WHEN DISMANTLED, PLS REMOVE THE CIRCINAL
  WOOD(F) FROM THE RIGHT PANEL(I) FIRST.

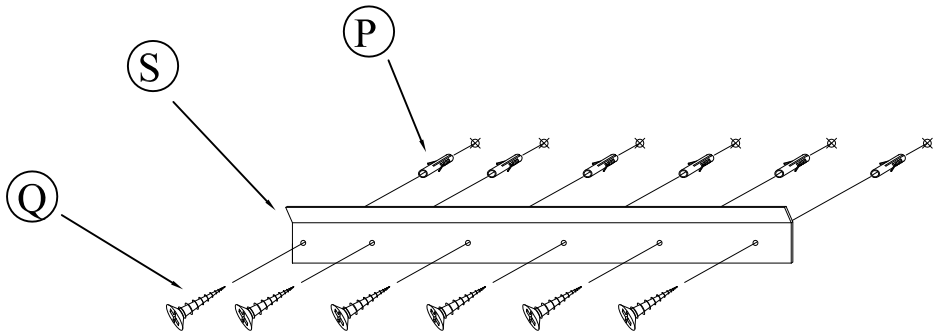

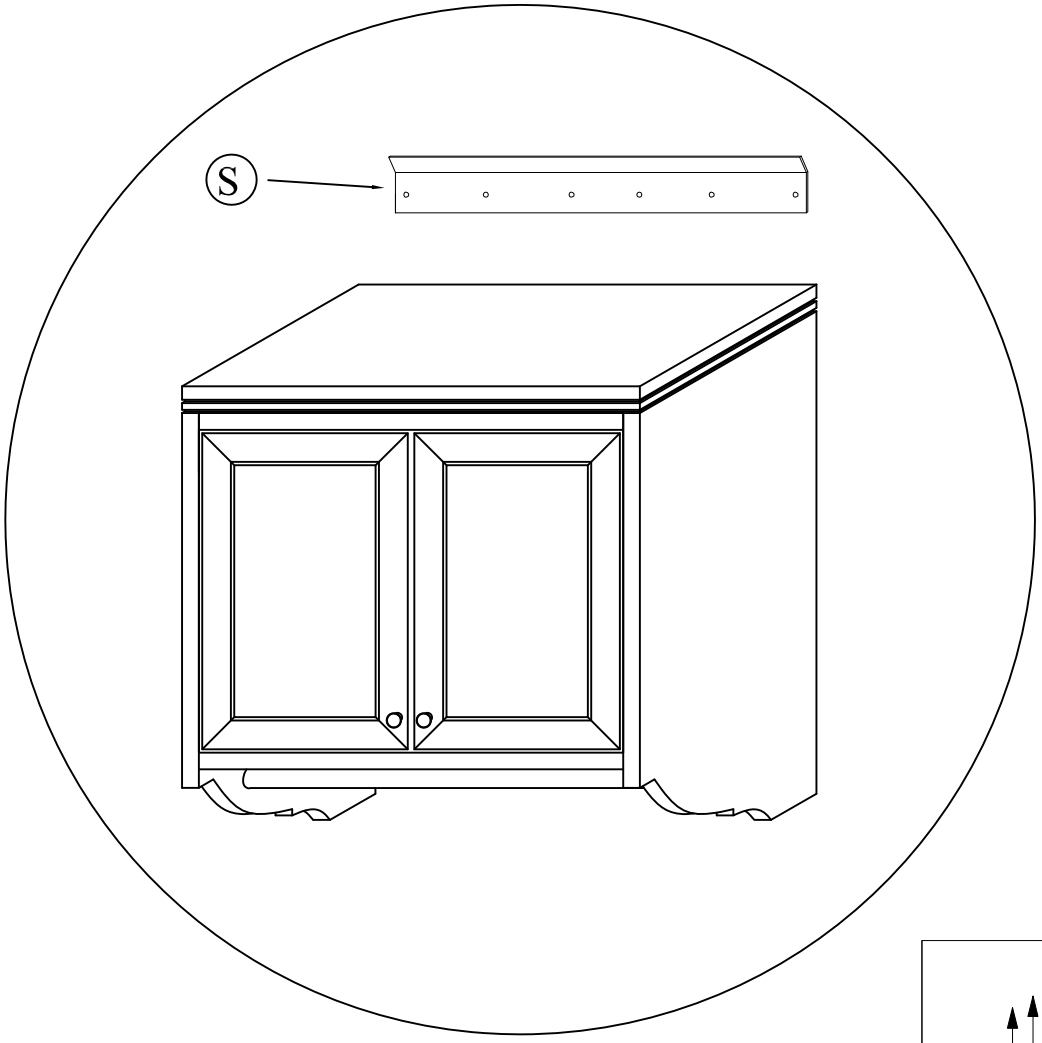

wall

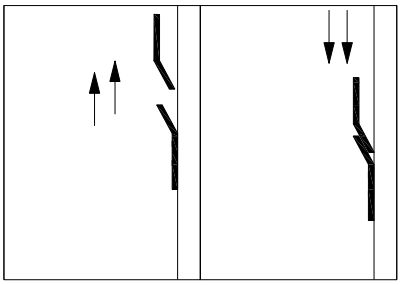

16).ASSEMBLE THE GECKOS(P).

- DRILL 6 HOLES INTO THE WALL, PLEASE REFER TO THE REAR BACK PANEL' HOLE DISTANCE AND HEIGHT.
- TAP 6 GECKOS(P) INTO THE HOLES ON THE WALL. THEN ROTATE 6 SCREWS(Q) INTO THE GECKOS(P).
- HANG THE CABINET ONTO THE SHEETIRON(S).